


ECONORAM IV^{T.M.} USER'S MANUAL

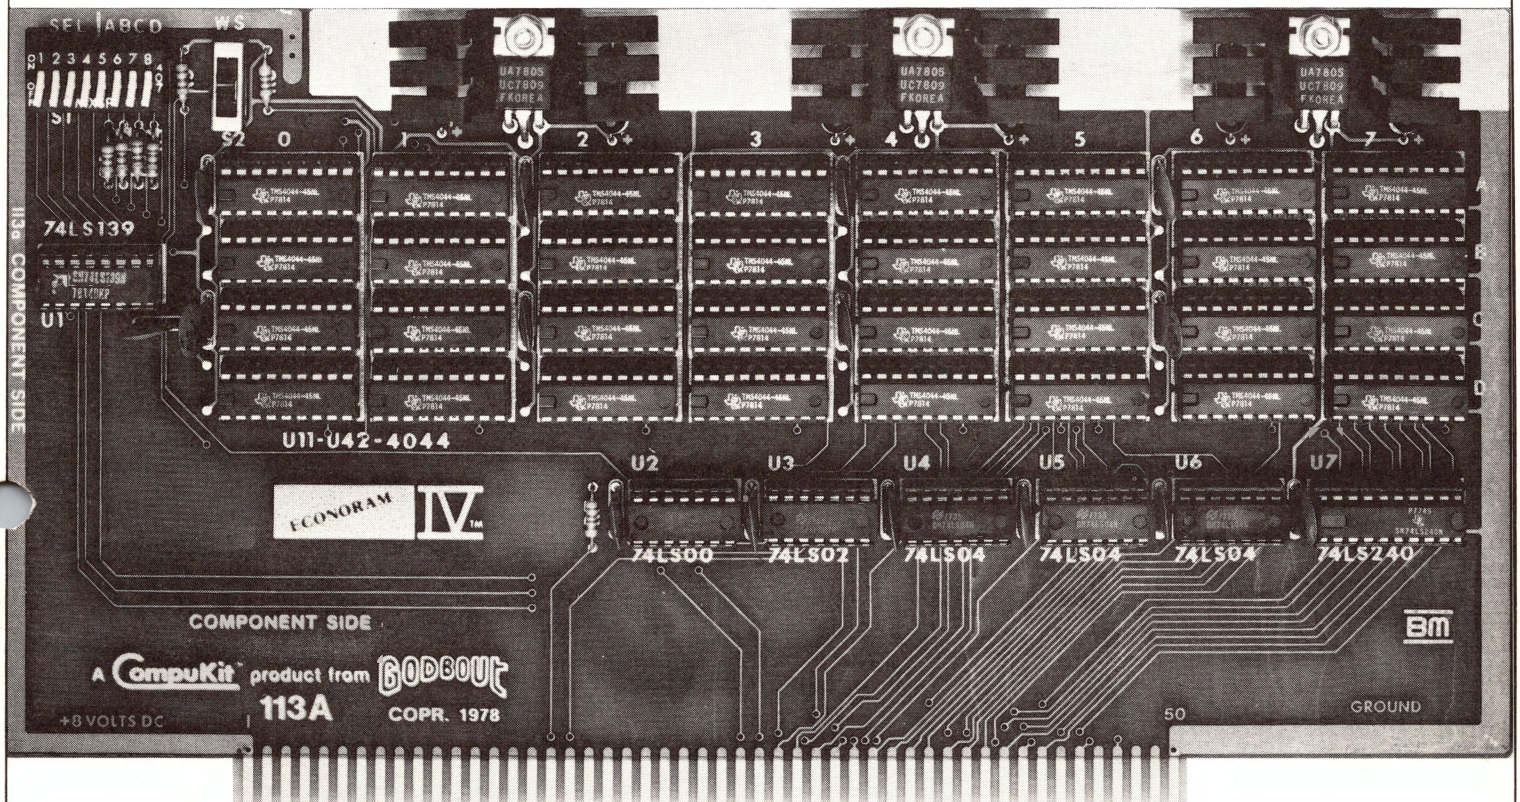

16K x 8 static memory • S-100
using TMS40L44/MM5257 • 4MHz

113 ^A **CompuKit**^{T.M.} product from **GODBOUT**
mac

Rev 3/79

Table of contents

About Econoram IV	3
Technical overview	3
Parts list	3
Assembly procedures	4
Component layout	5
Construction	6
Memory address assignment/disable	7
Memory protect switches	7
Write strobe select switch	7
Phantom line	7
Caution	7
Schematics	8, 9
Memory testing	10
Memory testing routine	10
Circuit description	11
Customer service information	12
Limited warranty information	12

ABOUT ECONORAM IV

Congratulations on your decision to purchase ECONORAM IV, a 16K x 8 memory board designed specifically for electrical and mechanical compatibility with the S-100 buss standard. The S-100 buss currently is one of the most popular in the industry and by far the most prolific; we believe this board, with the rest of the S-100 portion of the ECONORAM family, is one of the best memory boards available for that buss.

We recommend that the parts in this kit be checked against the parts list for completeness and that these instructions be read through carefully before starting. Completion of the assembly should take from one to four hours, depending on previous assembly experience, and upon completion, you will discover -- as thousands of satisfied ECONORAM owners have discovered -- the pleasure of using a fine memory board that just works, and works, and works.

As the first company to nationally offer memory kits to computer hobbyists, we again thank you for choosing ECONORAM IV... welcome to the club.

TECHNICAL OVERVIEW

This board incorporates proven static memory technology. There are currently two popular types of memory being used in products such as this: static and dynamic. Static memories are the overwhelming choice in applications where speed, complexity, ease of use, and reliability must all be considered... there is no refresh slowdown, the CPU is freed from the drudgery of caretaking the memory, and techniques such as direct memory access (DMA) are far more reliable and easier to implement.

The individual memory ICs used on this board are grouped together to form a single 16K x 8 block of memory, addressable on any 16K boundary using the on-board dip switch (no jumpers required). Additional features include write protect switches for each 4K sector of the 16K block; a write strobe selection switch which allows use of memory in systems with or without a front panel (MWRITE strobe); allowance for use with or without the PHANTOM line; thorough capacitor bypassing of supply lines to suppress transients; plus on-board regulation and heat-sinking for reliably cool operation. All this and sockets for all ICs go onto a double-sided, solder-masked printed circuit board with a complete component-layout legend.

Parts List

Upon receipt of your kit, check your parts against the list below.

- ☐ (1) Econoram IV circuit board.

INTEGRATED CIRCUITS (note: the following parts may have letter suffixes and prefixes along with the key numbers given below.)

- ☐ (32) TMS4044 or MM5257N-3L memories (U11 - U42)
- ☐ (1) 74LS00 nand gate (U2)
- ☐ (1) 74LS02 nor gate (U3)
- ☐ (3) 74LS04 hex inverters (U4 - U6)
- ☐ (1) 74LS240 TRI-STATE[®] inverters (U7)
- ☐ (1) 74LS139 dual 1 of 4 decoder (U1)
- ☐ (3) 7805 positive 5V regulators (U8 - U10)

OTHER ELECTRONIC COMPONENTS

- ☐ (7) 2.7K ohm resistors (red-violet-red; R1 - R7)
- ☐ (6) 39uF tantalum capacitors (C1 - C6)
- ☐ (14) ceramic disk bypass capacitors*

MECHANICAL COMPONENTS

- ☐ (39) low profile sockets*
- ☐ (1) slide switch (S2)
- ☐ (1) 8 pole dip switch (S1)
- ☐ (3) heat sinks for regulator ICs
- ☐ (3) 6-32 bolts
- ☐ (3) 6-32 lockwashers
- ☐ (3) 6-32 nuts
- ☐ (1) instruction booklet

*supplied already soldered to board.

ASSEMBLY PROCEDURES

Proper operation of your kit depends on good soldering technique, along with correct identification and handling of the various parts used during construction. Read this manual thoroughly before plugging in your soldering iron.

SOLDERING TECHNIQUES. The Econoram Board is *solder-masked*. In case you are not familiar with solder-masked boards, they are similar to standard PC boards, but are screened with a solder-resistant coating. This mask is screened over the entire board, except where there are solder connections to be made; since solder does not comfortably hold to or flow over the resist, the chances of getting a bridge between tight, adjacent traces are decidedly minimized.

However, soldering a solder-masked board requires a bit of care. All soldering is performed on the *solder* side of the board; we recommend keeping all component leads straight up at all times, not bent over as with some other types of boards (see figure 1). When soldering, bring the iron tip in at an angle, against the board pad and component lead; then feed in a tiny bit of solder at opposite ends of the lead (see figure 2). This makes a good joint with no excess solder.

NOTE: Use of any type of solder other than rosin core solder invalidates the warranty. Do not use any type of solder paste or corrosive flux under any conditions.

IDENTIFICATION OF PARTS. There are many ICs used in this kit; each one must be oriented correctly for proper operation. Most ICs have a dot near one corner that indicates pin 1 (see figure 3); sometimes this dot appears in conjunction with a deeply cut notch or circle. Other types indicate the pin 1 end of the IC by a deep notch, or a notch within a shallow circle (see figure 4). In case of doubt, place the IC in front of you so that any identifying numbers read from left to right; pin 1 is almost always in the lower left-hand corner (figure 5).

Additionally, the 6 tantalum capacitors must be correctly identified as to the (+) and (-) ends. The (+) end is the rounded end and is also identified with a (+) mark on the body (see figure 6).

HANDLING OF PARTS. All integrated circuits may be damaged by static electricity discharges; however, MOS ICs - such as the memory ICs included with your kit - are most susceptible to this problem. You can easily accumulate a static charge on your body in the thousands-of-Volts range (say, by walking across a rug on a dry day). If you then touch the pins of an IC, those thousands of Volts flow into the IC and can damage the internal structure. To prevent this from happening, leave the ICs in their protective foil until needed; then, before plugging in each IC, touch the protective foil with your finger to drain off any residual charge. Also, avoid wearing clothing that is prone to generating static electricity during construction (such as sweaters, certain types of acrylic fabrics, and so on).

Another caution concerns the mounting of resistors. These are small, somewhat fragile parts, and excessive force used while bending the leads may cause damage or crack the part. Either use a commercial lead bender (available from Godbout's and many other electronic vendors), or use needle-nose pliers to grasp the lead close to the body of the resistor and then bend the lead downward (see figure 7).

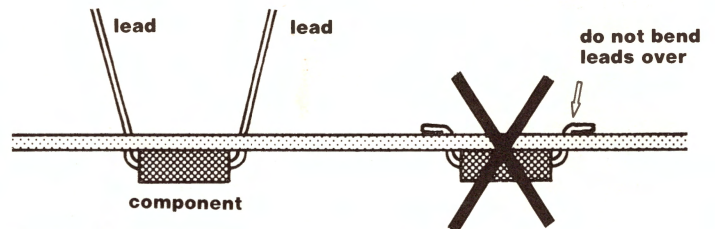


Figure 1.

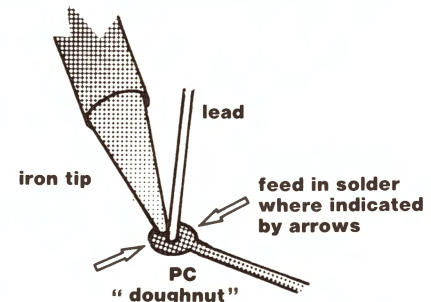


Figure 2.

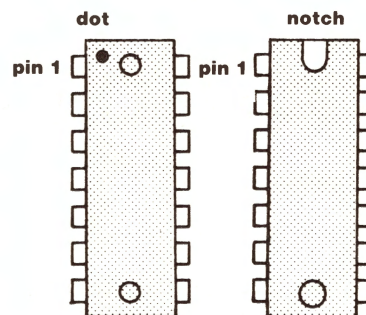


Figure 3.

Figure 4.



Figure 5.

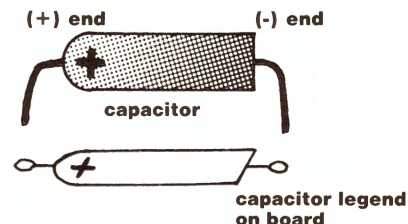


Figure 6.


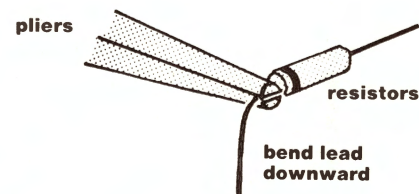


Figure 7.

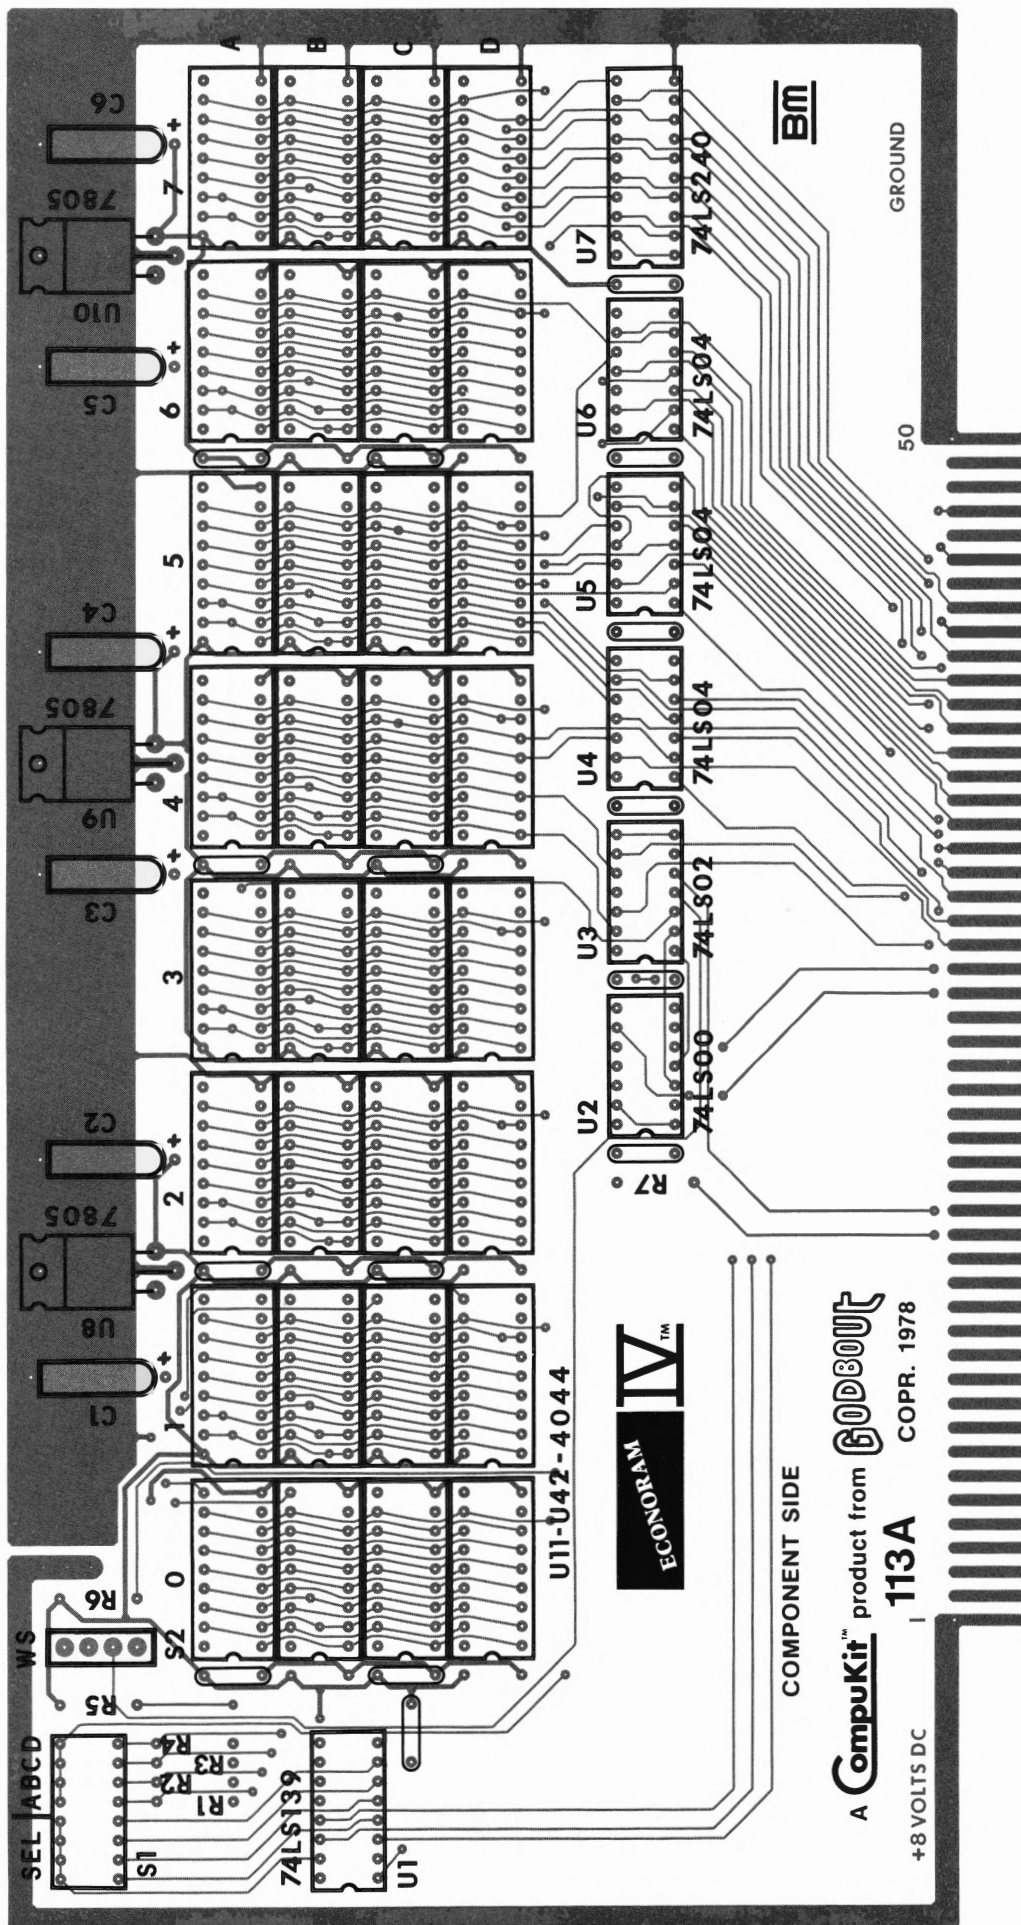

A **CompuKit**™ product from **GODBOUL**
113A COPR. 1978

+8 VOLTS DC

Component Layout



CONSTRUCTION

Keeping the preceding information in mind, it is now time to mount the various components and install the ICs into their sockets. Orient the board as shown in the component layout; then referring to this layout, follow the steps below in the order given.

- ☐ 1. Bend leads, mount, and solder the resistors in place as indicated.
- ☐ 2. Bend leads, mount and solder the 6 tantalum capacitors in place as indicated, carefully observing the orientation of the (+) end.
- ☐ 3. Mount the slide switch in position as shown in figure 8 (note: orientation is not important).
- ☐ 4. Mount the three regulators and the regulator heat sinks in place. Referring to figure 9, observe that the heat sinks mount on top of the board, and then, the regulators mount on top of the heat sinks. If desired, a small dab of heat sink compound may be added between the regulator cases and heat sinks to improve thermal transfer from regulator to sink. Again referring to figure 9, bend all regulator leads as shown, then bolt the heat sink regulator assemblies into place using the provided nut, bolt, and lockwasher hardware. After these assemblies are in place, solder the regulator leads on the non-component side of the board.

☐ 5. Observe the 8 pole dip switch. The side with the number 1-8 faces the upper edge of the board (see figure 8). Mount the switch in place, and then solder. (Note: May be already soldered in place.)

☐ 6. Before proceeding, check your work so far by testing the board for any shorts between supply lines and ground. Referring to figure 10, use a Voltmeter to test for a shorted condition at the test points indicated on the regulator.

Perform this test at each regulator. If you find a short circuit at any of these points, carefully check over your board for the cause of the short. If all readings are satisfactory, proceed with construction of the board.

☐ 7. Prepare to plug in all ICs in accordance with the component layout, page 5. All ICs should have the pin 1 end facing towards the *left* side of the board; any numbers or other markings on the IC should be right side up with the board oriented as shown in the component layout. If any of the writing is upside down, the IC may not be correctly inserted.

A common problem with boards returned for repair is improper insertion of the IC; sometimes a lead from the IC will bend *under* the part instead of going into the socket contacts. We recommend inserting each IC halfway, and verifying visually that all pins are indeed going into the socket. Then, push the IC in the rest of the way.

Keeping the preceding in mind, insert the support ICs first, and then insert all memory IC.

☐ 8. Check your work over carefully for errors in construction, improperly inserted ICs, or improper polarity of the tantalum capacitors. If all is well, assembly of your board is now complete.

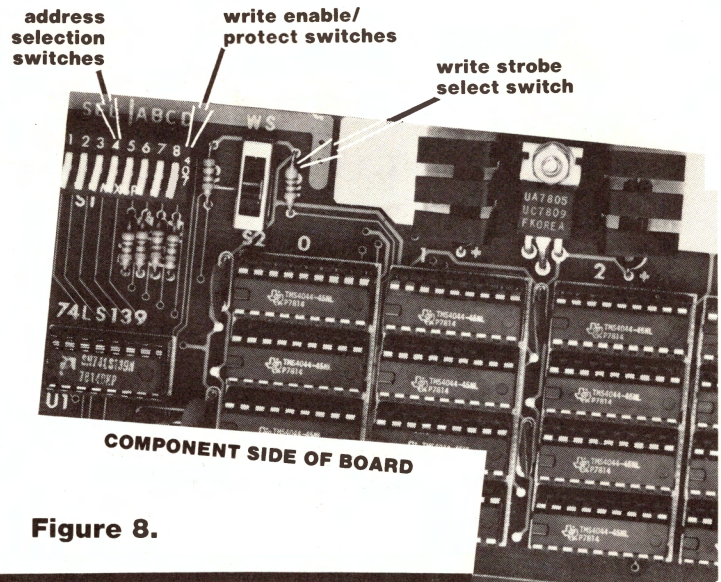


Figure 8.

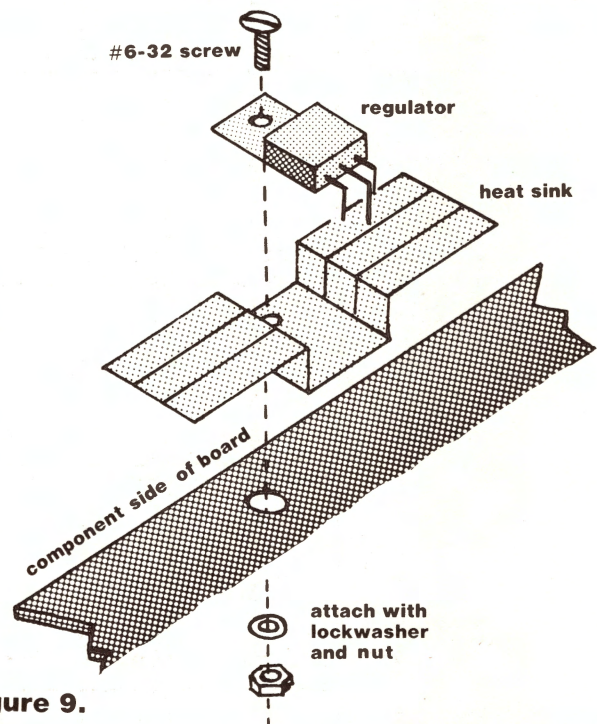


Figure 9.

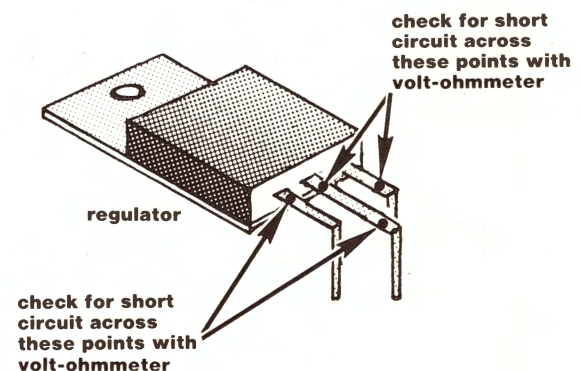


Figure 10.

MEMORY ADDRESS ASSIGNMENT

This board is addressable as a single 16K block on any K boundary. DIP switch positions 1-4 select which 16K area of memory the board will be associated with as follows:

- 1 - 0000 - 3FFF (hex)
- 2 - 4000 - 7FFF (hex)
- 3 - 8000 - BFFF (hex)
- 4 - C000 - FFFF (hex)

Only one of these four switches may be up (on) at a time, however, all four may be down which will deselect the board (content of the memory may neither be changed nor read) and the board is transparent to the system allowing other boards to be addressed to that area as long as it is disabled.

MEMORY PROTECT SWITCHES

DIP switch positions 5-8 are write enable switches. Inversely they may be used for manual write protection of the memory. Each enable protects 1/4 of the 16K block of memory (4K) as follows:

- 5 - 1st 4K of 16K block
- 6 - 2nd 4K of 16K block
- 7 - 3rd 4K of 16K block
- 8 - 4th 4K of 16K block

Any combination of these four switches may be up/on with up write enabling the particular 4K area and down write protecting that area.

WRITE STROBE SELECT SWITCH

This switch selects use or non-use of the S-100 buss signal MWRITE (pin 68). This signal is normally produced by a front panel and would not be available in front panel-less machines; however, some CPU boards now implement this signal. If MWRITE is present in your machine, place the slide switch in the center position. If not present, this switch should be in the up position.

PHANTOM LINE

In response to increasing numbers of users who have requested inclusion of "Phantom" line, Buss pin 67 which is ten used for implementing power on jump features. This board is designed for use with active or inactive phantom lines. Boards which are revision "A" or earlier have this line solidly connected. Revision "B" and later boards require a jumper to implement this feature (see figure 11).

CAUTION

Some manufacturers use the PHANTOM line (buss pin 67) for a refresh signal. This will conflict with the PHANTOM feature, and cause boards with PHANTOM to fail. If your system has this conflict it must be resolved by either eliminating the refresh signal on the CPU board or disabling the PHANTOM feature on this and other boards.

On revision "A" or earlier boards the Phantom feature may be disabled by cutting the trace where it leaves buss pin 67. On revision "B" and later boards the PHANTOM feature is disabled if the jumper is NOT CONNECTED on the trace to buss pin 67 (see figure 11).

If you want the PHANTOM feature, the conflicting refresh signal may be eliminated (IF NOT USED ELSEWHERE IN THE SYSTEM) by cutting the trace connected to buss pin 67 on the CPU board. BE SURE OF YOUR SYSTEM CONFIGURATION BEFORE CUTTING ANY TRACES.



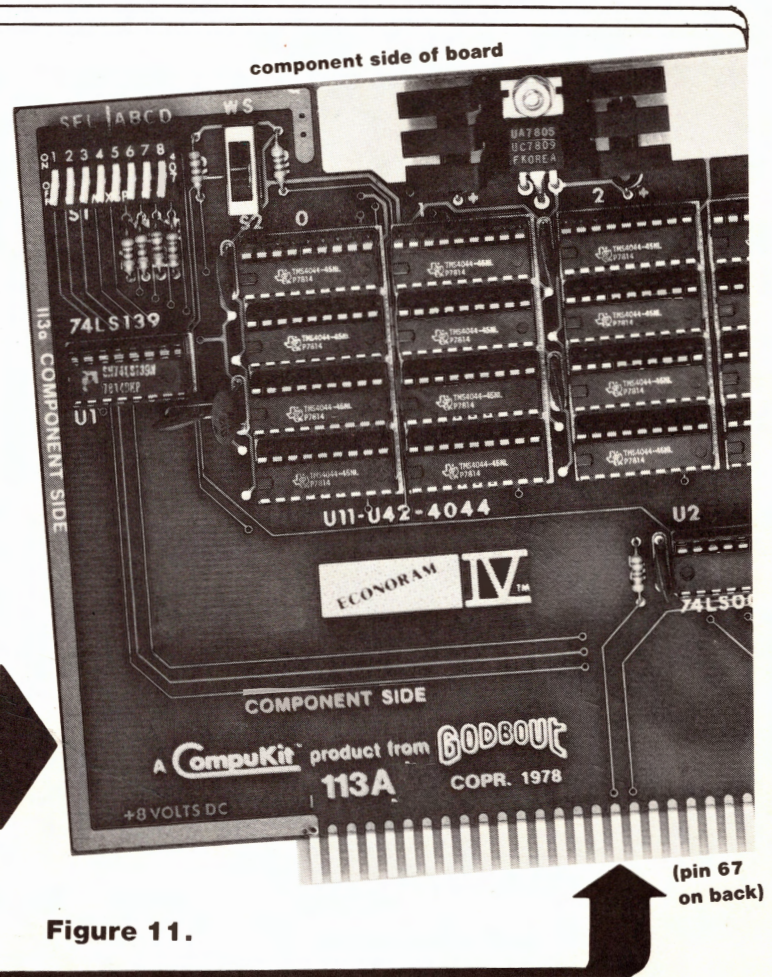


Figure 11.

SCHEMATIC - ECONORAM IV

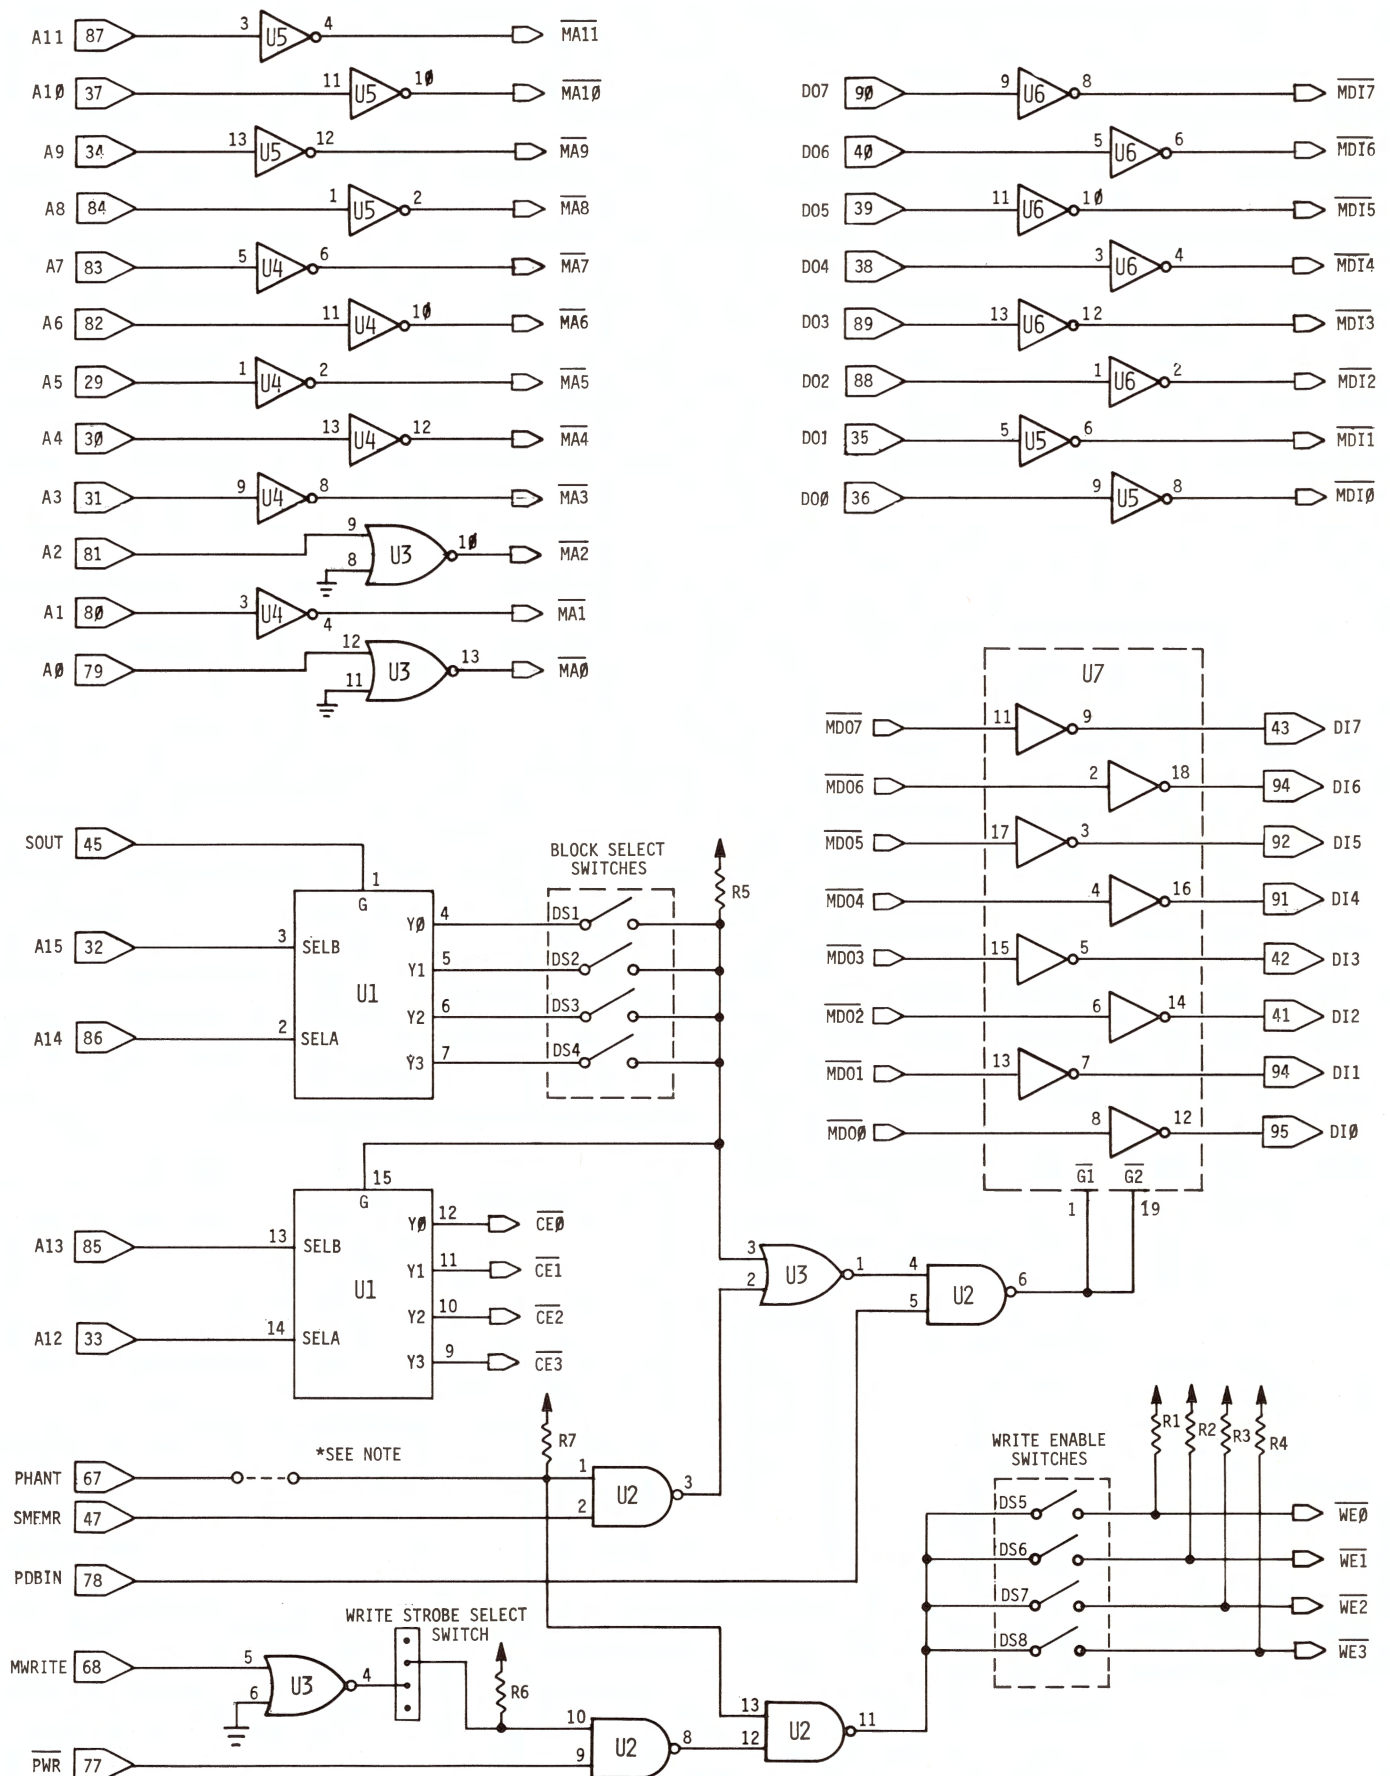

NOTE: On revision "A" boards this trace is solid; on revision "B" and later boards require a jumper to implement.

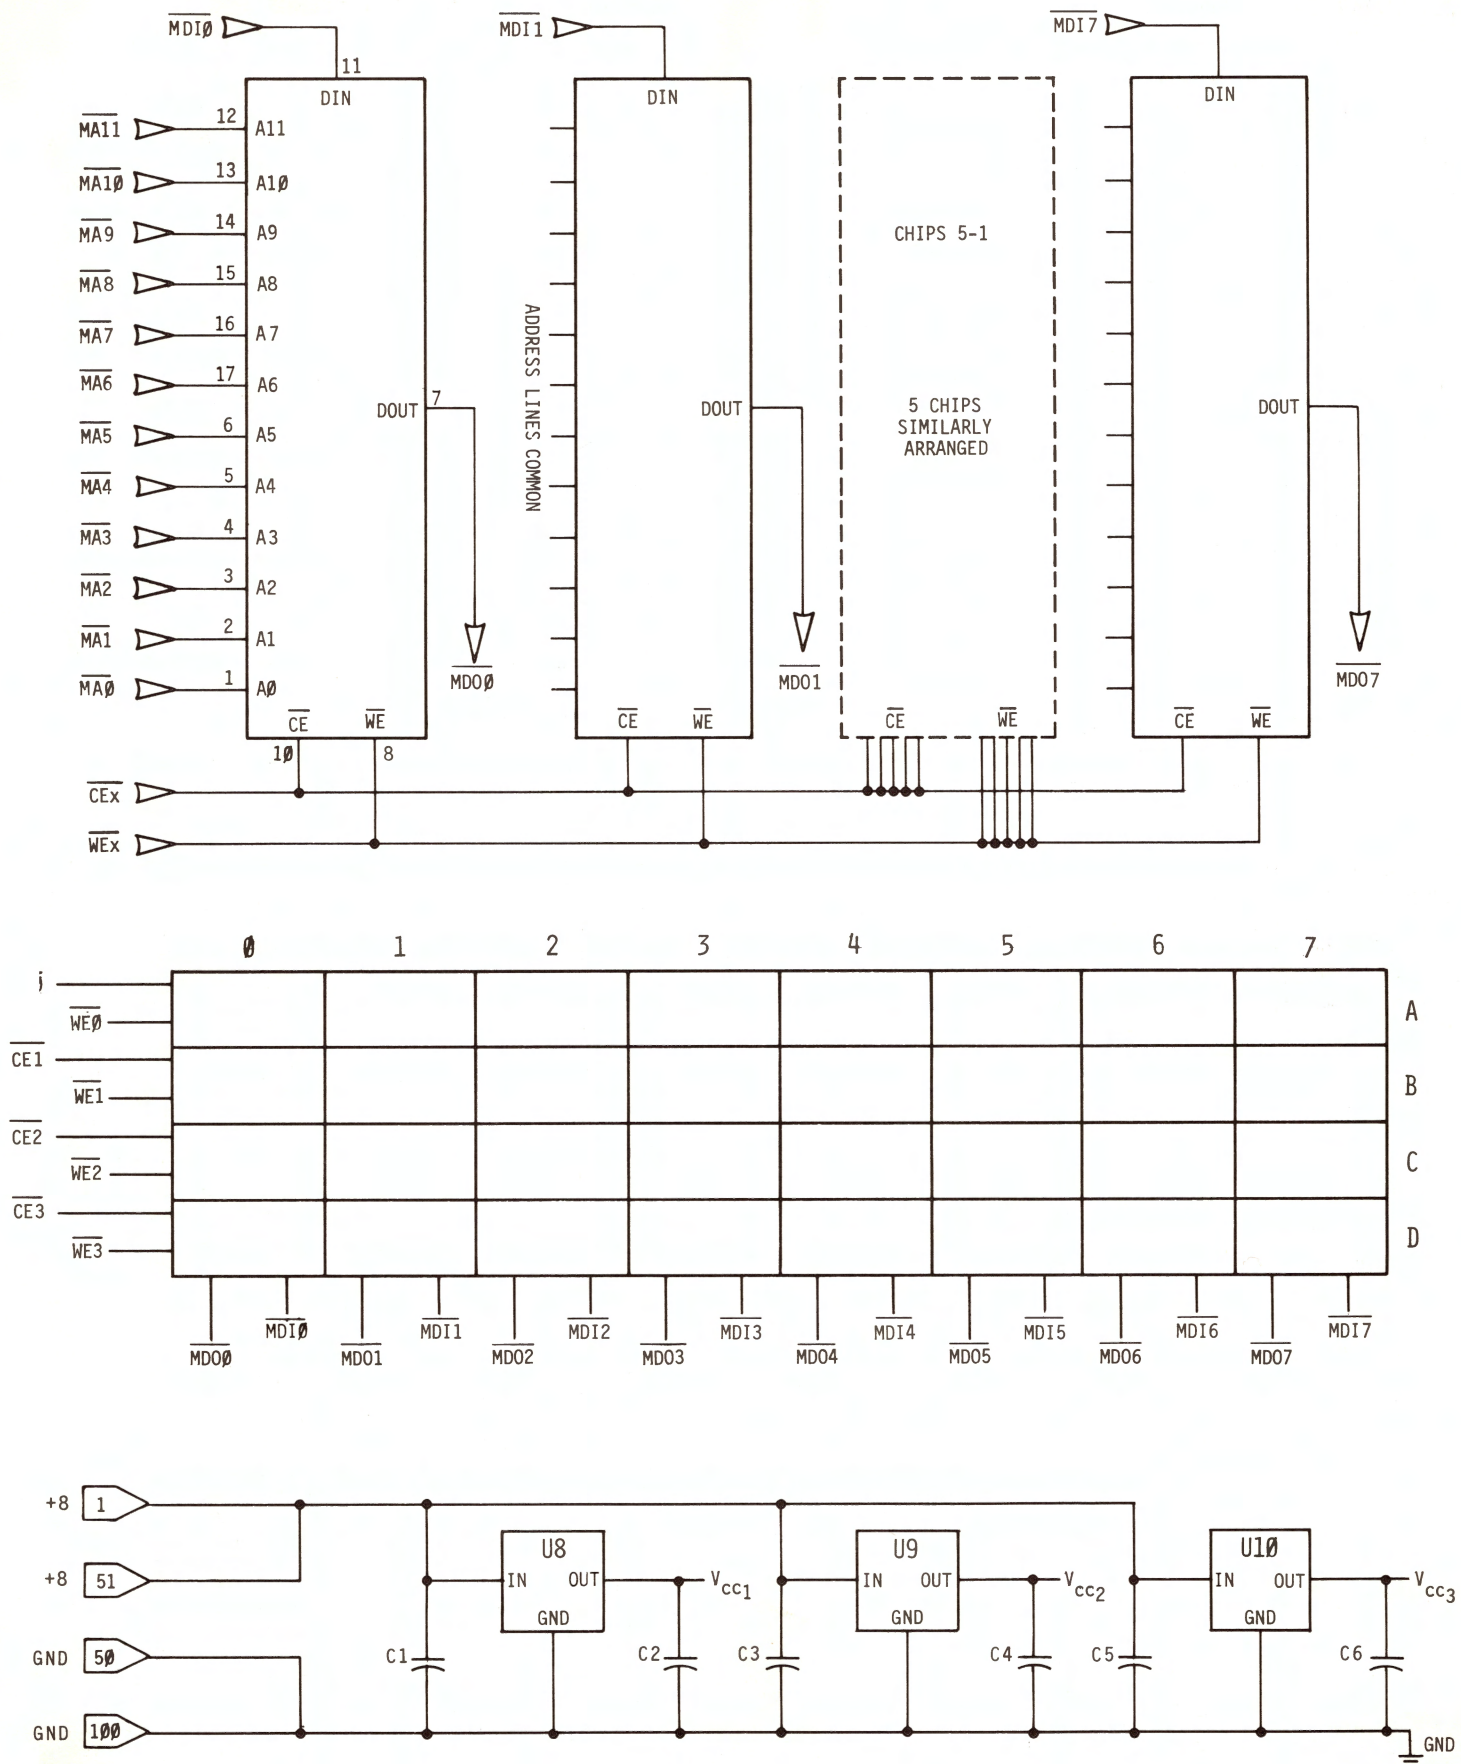

SCHEMATIC - ECONORAM IV

MEMORY TESTING

If the memory board seems to be working properly, the Memory Testing Routine (figure 13) can be used to give the board a more thorough workout. It is rather slow; but will do the job well. It can be entered via editor/assembler or front panel switches.

The routine is set up to test 16K from 4000 hex up to 8000 hex. This may be changed by entering a different starting address at "STRT" (3001 - 3002) and/or a different end address at "END" (3004 - high order byte only).

If the memory passes the test it starts over again. You may on the other hand, insert a jump instruction at "MARK" to some user routine or, if desired the user may enter an output instruction or, can do a notification routine at "MARK" to show successful completion and restart.

If the memory fails the test, critical information is stored and the routine enters a software "HALT", that is a "jump to here" at "SHLT". Front panel lights, if any, will show this state. The user may then use the front panel or dump routines to display the following stored failure info:

3069* "FDE" = D, E pair . . . D is the fill character
and E is the test character
306B* "FHL" = H, L pair . . . the failure address
306D* "FOUT" = the data expected at this address
306E* "FIN" = the data read from, the address
* address from *Memory Testing Routine Listing*.

The user may replace the "jump" at "SHLT" with a jump to a display or notification routine.

The difference between "FOUT" and "FIN" should indicate which bit is failing, indicating which chip or area is causing the problem.

This test will find most of the harder to distinguish errors.

MEMORY TESTING ROUTINE

3000	21	00	40
3003	3E	80	
3005	32	6E	30
3008	3E	10	
300A	84		
300B	4F		
300C	16	00	
300E	1E	FF	
3010	22	65	30
3013	AF		
3014	47		
3015	7B		
3016	5A		
3017	57		
3018	79		
3019	2A	65	30
301C	72		
301D	23		
301E	BC		
301F	C2	1C	30
3022	2A	65	30
3025	73		
3026	7B		
3027	BE		
3028	C2	6F	30
302B	79		
302C	23		
302D	94		
302E	C2	4D	30
3031	B8		
3032	44		
3033	CA	15	30
3036	3A	66	30
3039	00		
303A	00		
303B	00		
303C	3A	6E	30
303F	B9		
3040	CA	00	30
3043	79		
3044	67		
3045	2E	00	
3047	C6	10	
3049	4F		
304A	C3	10	30
304D	22	67	30
3050	7A		
3051	BE		
3052	C2	6F	30
3055	2C		
3056	C2	51	30
3059	79		
305A	24		
305B	BC		
305C	C2	50	30
305F	2A	67	30
3062	C3	25	30
3065			
3067			
3069			
306B			
306D			
306E			
306F	22	6B	30
3072	32	6D	30
3075	7E		
3076	32	6E	30
3079	EB		
307A	22	69	30
307D	C3	7D	30
3080			
0010	STRT	LXI	H,40
0020	END	MVI	A,80
0030		STA	FIN
0040		MVI	A,10H
0050		ADD	H
0060		MOV	C,A
0070		MVI	D,0
0080		MVI	E,0FFH
0090	DONE	SHLD	STAD
0100		XRA	A
0110		MOV	B,A
0120	SCND	MOV	A,E
0130		MOV	E,D
0140		MOV	D,A
0150		MOV	A,C
0160		LHLD	STAD
0170	FILL	MOV	M,D
0180		INX	H
0190		CMP	H
0200		JNZ	FILL
0210		LHLD	STAD
0220	NEXT	MOV	M,E
0230		MOV	A,E
0240		CMP	M
0250		JNZ	FAIL
0260		MOV	A,C
0270		INX	H
0280		SUB	H
0290		JNZ	NDON
0300		CMP	B
0310		MOV	B,H
0320		JZ	SCND
0325		LDA	STAD+1
0330	MARK	NOP	
0331		NOP	
0332		NOP	
0340		LDA	FIN
0350		CMP	C
0360		JZ	STRT
0370		MOV	A,C
0380		MOV	H,A
0390		MVI	L,0
0400		ADI	10H
0410		MOV	C,A
0420		JMP	DONE
0430	NDON	SHLD	NXAD
0440		LOPB	MOV
0450	LOPA	CMP	M
0460		JNZ	FAIL
0470		INR	L
0480		JNZ	LOPA
0490		MOV	A,C
0500		INR	H
0510		CMP	H
0520		JNZ	LOPB
0530		LHLD	NXAD
0540		JMP	NEXT
0550	STAD	DS	2
0560	NXAD	DS	2
0570	FDE	DS	2
0580	FHL	DS	2
0590	FOUT	DS	1
0600	FIN	DS	1
0610	FAIL	SHLD	FHL
0620		STA	FOUT
0630		MOV	A,M
0640		STA	FIN
0650		XCHG	
0660		SHLD	FDE
0670	SHLT	JMP	SHLT
0680	*		

CIRCUIT DESCRIPTION

The heart of Econoram IV is the TMS4044/MM5257 static memory IC (RAM), which can store 4096 single bits of information (thus, each is a "4K x 1" memory IC). Unlike standard RAMs, those included with your kit are specifically designated by the manufacturer as low power, high speed parts.

These ICs are arranged in rows that are 8 ICs wide. This way, each row can store 4K x 8 bits of information. Paralleling 4 of these rows together produces a total memory storage of 16K x 8 bits. (Note that the bit number corresponding to a given column of ICs is indicated along the top edge of the memory array).

Now that we have this storage, there are still other aspects we must consider. First, we need to address a specific location in memory; and, we need to be able to *write* data into the memory, or *read* data from the memory.

The schematics on pages 8 and 9 show the address circuitry along with the other Econoram IV circuitry. Each memory IC requires 12 address bits (A0-A11) to access any one of the 4096 bits available in the IC. These address bits are generated by the CPU and are buffered by a number of inverters. After buffering, a particular address is presented to all IC address selection pins. However, we additionally need to select which particular row of ICs is to react to the given address. This requires 4 more address bits (A12-A15), which are decoded and used to enable the desired row of ICs (note row markings along the right hand side of the memory array).

When data is to be written into memory, it first passes through 8 inverting buffers before being put on the data pins of the RAMs (buffering prevents loading of the data buss). Data to be read on to the data buss from memory passes through 8 TRI-STATE® inverting buss drivers; when data is not being read on to the buss, the outputs of these inverters are in a high-impedance or "disconnected" state.

An unfortunate fact of life is that logic ICs generate switching transients that travel along the power supply lines. If these transients work their way into the logic circuitry, problems can appear. To prevent such occurrences, bypass capacitors are tied across the power lines at regular intervals in the memory array and at every support IC.

This board is guaranteed to operate at 4MHz over the full temperature range (0° - 70° C ambient) and to draw less than 2000 mA (2 amps). Our typical measured currents were less than 1600 mA at cold start-up, rapidly decreasing to around 1200-1400 mA, depending on the surrounding temperature. We have heard similar reports from the people already using these boards.

It is interesting to note that static RAM technology has progressed to the point that this high-performance static RAM board is comparable in cost and power consumption to dynamic memory boards.

THANK YOU

This board is the result of much time, work and experience on the part of a number of people.

We strive for a board that doesn't just work the first time, but continues to give reliable operation for a long time. If we can be of any help to you in applying this board, or if you have any questions, please let us know. As always, we solicit your comments, letters, and new product suggestions.

HAPPY COMPUTING!

CUSTOMER SERVICE INFORMATION

Our paramount concern is that you be satisfied with any Godbout CompuKit product. If this product fails to operate properly, it may be returned to us, see warranty information below.

If you have any questions about assembly, performance, specifications or need further information feel free to write us at:

P.O. Box 2355, Oakland Airport, CA 94614.

When writing, please be as specific as possible concerning the nature of your query. We maintain a 24 hour a day phone, for taking orders, (415) 562-0636. If you have problems or questions which cannot be handled by mail, this number can be used to connect you with our technical people **ONLY** during normal business hours (10am-5pm Pacific Time). Unfortunately, we cannot return calls, or accept collect calls.

LIMITED WARRANTY INFORMATION

Godbout Electronics will repair or replace, at our option, any parts found to be defective in either materials or workmanship for a period of 1 year from date of invoice. Defective parts *must* be returned for replacement.

If a defective part or design error causes a Godbout Electronics product to operate improperly during the 1 year warranty period, we will service it free (original owner only) if delivered and shipped at owner's expense to Godbout Electronics. If improper operation is due to an error or errors on the part of the purchaser, there may be a repair charge. Purchaser will be notified if this charge exceeds \$10.00.

We are not responsible for damage caused by use of solder intended for purposes other than electronic equipment construction, failure to follow printed instructions, misuse or abuse, unauthorized modifications, use of our products in applications other than those intended by Godbout Electronics, theft, fire, or accidents.

Return to purchaser of a fully functioning unit meeting all advertised specifications in effect as of date of purchase is considered to be complete fulfillment of all warranty obligations assumed by Godbout Electronics. This warranty covers only products marketed by Godbout Electronics and does not cover other equipment used in conjunction with said products. We are not responsible for incidental or consequential damages.

Prices and specifications are subject to change without notice, owing to the volatile nature and pricing structure of the electronics industry.

"Econoram" and "Econoram IV" are trademarks of W.J. Godbout.

TRI-STATE® is a trademark of National Semiconductor Corp.

Contents of this booklet ©1979 by Godbout Electronics. All rights reserved. We encourage quotation for the purposes of product review if source is credited.